


Typ DDR

1. Ware möglichst frostfrei lagern. Keine Montage bei Frost!
2. Vor Einbau auf Transportschäden achten!
3. Bei Kälte vorher die Filterdüsen aufwärmen,
ggf. in warmen Wasser.
4. Bohrungsdurchmesser im Drainagerohr prüfen.
5. Filterdüsen von Hand in die Bohrungen stecken.
Nicht einschlagen bei zu kleiner Bohrung!
6. Mutter in Uhrzeigerrichtung festschrauben.
Anzugmoment ist 0,6 mkp–1,0 mkp (6–10 Nm).
Elektro- oder Pressluftschrauber nur mit Auslösemoment
0,6 – 1,0 mkp (6–10 Nm) max. U/Min. 430 verwenden!
6. Sitz der Rohrsättel überprüfen.
Keine Inbetriebnahme bei entstehendem Spalt!

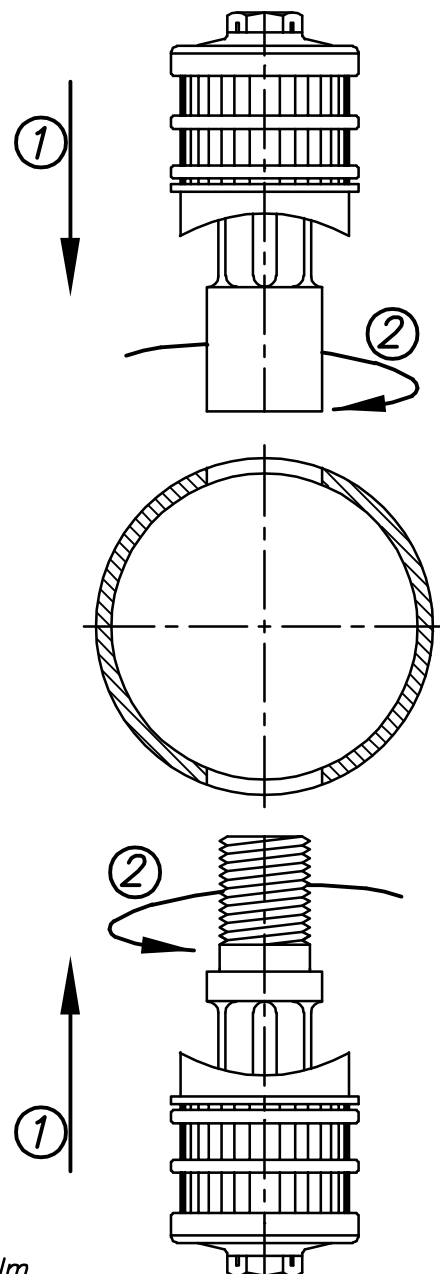

1. Nozzles have to be stored free from frost,
do not install at temperatures below 0° C!
2. Prior to installation check whether any
transport damage has occurred !
3. In case of frost, preheat filter nozzles,
use warm water if necessary !
4. Check hole diameter in nozzle pipe.
5. Insert filter nozzles manually into the hole!
< Do not use a hammer ! >
6. Screw nozzles clockwise by using
a spanner with 17 mm hexagon nut.
Tightening torque 6 Nm – 10 Nm.
Use electric or pneumatic screw driver with 6 Nm–10 Nm
and Max rpm 430!
7. Take care of the right position between the pipesaddle and pipe.